





OpenLight SHADES

Roller Shade with Fascia Installation Instructions

3" FASCIA

1. INSTALLING CHAIN DIVERTER (3" ONLY)

If not already installed, insert chain diverter into clutch side mounting bracket. Hang the chain diverter on the bracket lower arms and rotate backwards into the bracket. Make sure the two round pins on the chain diverter "click" into the two matching round holes on the bracket. Failure to make sure the diverter clicks in position will allow the diverter to fall out later.

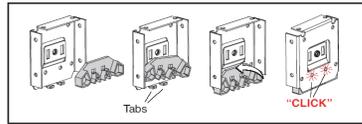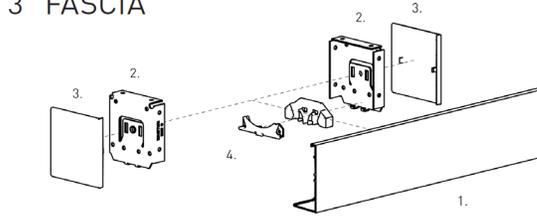

1. 3" Skyline Square Fascia
2. 3" Skyline Fascia Bracket
3. 3" Skyline Square End Cap
4. Chain Diverter & Cover Set


2. MOUNT THE BRACKETS

The open end of each bracket faces downward, as shown on drawings.

3. INSTALL THE SHADE

- a. Put the spring loaded pin into the round hole of the bracket
- b. Keeping the pin end secured in the bracket, insert the hook arms on the clutch straight into the two hook arm receiver holes in the bracket. Once the two hook arms are through the holes, gently pull down on the clutch until the two hook arms have locked securely to the bracket. The bottom of the clutch should always point straight down.


4" FASCIA

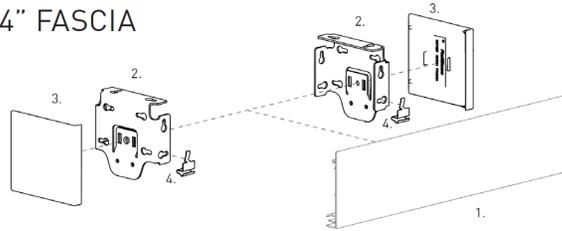

1. 4" Skyline Square Fascia
2. 4" Skyline Fascia Bracket
3. 4" Skyline Bracket Cover
4. Skyline Bracket Clip

4. ATTACH THE FASCIA PANEL

Attach the fascia by first hooking the top lip of the fascia panel onto the bracket as shown. Swing the bottom of the fascia panel towards the bracket and press at the bottom of the panel until the lip on the fascia engages and snaps locked to the bracket.

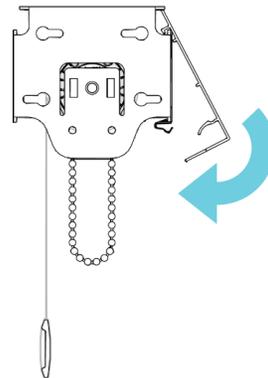

5. INSTALL THE TENSION DEVICE

The Tension Device reduces hazards of strangulation and entanglement of young children by limiting access to the control cord. Anchor the tension devices to the window frame or wall, so that young children cannot pull the cord around their necks.

- a. Lower the shade.
- b. Hold the tension device upright so the large curve is towards the top.
- c. Position the tension device on the window frame or the wall so that the tension device and control chain do not interfere with the operation of the
- d. Holding the tension device upright and in position, secure firmly to the window or wall.



6. OPERATE THE SHADE

Pulling gently on the chain in one direction raises the shade; pulling it in the other direction lowers the shade. On shades where fabric rolls against the window, the front chain does the raising. On shades where the fabric rolls toward the room, the rear chain does the raising.

7. ATTACH STOP BEADS TO CHAIN

Lower shade to window sill or floor. Use pliers to crimp the included stop bead on to the chain where it enters the clutch so that the shade cannot lower past this point. Raise the shade to full open position and place second stop bead to prevent the shade from raising past this point.

***Note: Not attaching stop beads to the chain will void the warranty**



Creative Windows

2216 S. INDUSTRIAL HWY. ANN ARBOR, MI 48104

PH: 734-769-5100

FAX: 734-769-5614

<http://creativewindowscommercial.com>