



OpenLight SHADES


Manual Roller Shade Installation Instructions

1. MOUNT THE BRACKETS

Attach the brackets to the window frame, window molding, wall or ceiling as shown.

Brackets are universal so clutch may be mounted on either side.


Note: If sharing a bracket between two shades, bracket can only be shared by a clutch and a pin end, not clutch-to-clutch or pin end to pin end.

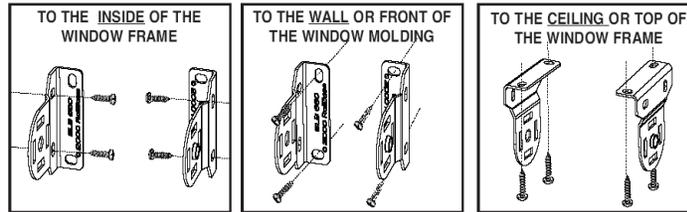

2. INSTALL THE SHADE

a. Put the spring loaded pin into the round hole of the bracket.

b. Keeping the pin end secured in the bracket, insert the hook arms on the clutch into the two hook arm receiver holes, gently pull down on the clutch until the two hook arms have locked securely to the bracket. The bottom of the clutch should always point straight down.

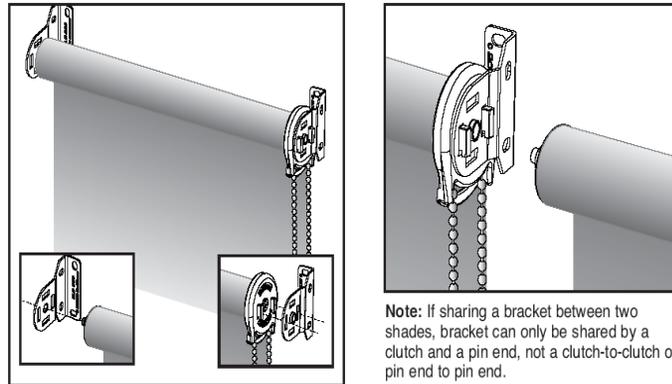

3. INSTALL THE TENSION DEVICE


The Tension Device reduces hazards of strangulation and entanglement of young children by limiting access to the control cord. Anchor the tension devices to the window frame or wall, so that young children cannot pull the cord around their necks.

a. Lower the shade.

b. Hold the tension device upright so the large curve is towards the top.

c. Position the tension device on the window frame or the wall so that the tension device and control chain do not interfere with the operation of the shade. Make sure to leave 1/4" clearance for the stop beads.

d. Holding the tension device upright and in position, secure firmly to the window or wall.

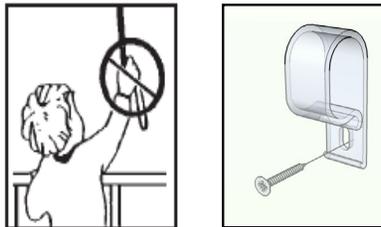

4. OPERATE THE SHADE

Pulling gently on the chain in one direction raises the shade; pulling it in the other direction lowers the shade.

On shades where fabric rolls against the window, the front chain does the raising. On shades where the fabric rolls toward the room, the rear chain does the raising.

5. ATTACH STOP BEADS TO CHAIN

Lower shade to window sill or floor. Use pliers to crimp the included stop bead on to the chain where it enters the clutch so that the shade cannot lower past this point.

Raise the shade to full open position and place second stop bead to prevent the shade from raising past this point.

***Note: Not attaching stop beads to the chain will void the warranty**



2216 S. INDUSTRIAL HWY. ANN ARBOR, MI 48104

PH: 734-769-5100

FAX: 734-769-5614

<http://creativewindowscommercial.com>